



Companion in Hygiene Solutions

TECHNICAL INFORMATION SHEET

11KC LAUNDRY CITRIC SOUR

Product Description

A laundry sour specially formulated for use in commercial and on premise laundries.

Features and Benefits

- Suitable for use in both domestic and commercial laundry machines.
- Effective neutralisation of residual alkalinity in rinse water and on fabric.
- Neutralises traces of chlorine bleach.
- Prevents yellowing of fabric.
- Prevents fabric damage.
- Can be used in all water conditions.

Use Instructions

Dosing level is dependent on wash classification and alkalinity of fresh water absorbed by fabric. Typical use rates are 3 to 5ml / kg dry fabric weight. Laundry Sour should be applied in the last rinse of a washer extractor or in the last section of a continuous batch washer. The last drain water coming from the washer extractor or from the press should have a pH of 6.0 - 6.5 and be free of residual chlorine.

Safe Handling and Storage

See visual information to right.
Full guidance on the handling and safe use of the product can be obtained from the Safety Data Sheet.
Store in original container.
Avoid extremes of temperature.

Technical Information

Appearance: Clear colourless liquid
pH: <3.0
Relative density: 1.05
Odour: Characteristic
Solubility: Fully miscible in water
The above data is typical of normal production and should not be taken as a specification.




Health & Safety

HAZARD AS SUPPLIED



Causes serious eye irritation.

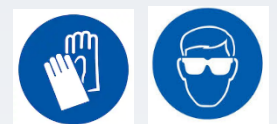

HAZARD WHEN USED
AT RECOMMENDED
DILUTION.



Not classified. Wear gloves for
prolonged use.



For reorder contact: B I O Detergents & Disinfectants Trading L.L.C.
PO Box 251116, Dubai, U.A.E Tel: 04 2666 572
Web: www.biodubai.com Email: info@biodubai.com

Manufactured by Ionic Products Ltd, Unit
26, Blaris Ind. Est., Altona Rd. Lisburn,
Co. Antrim, N. Ireland, BT27 5QB

Problem Solving

Problems in automatic dishwashing can sometimes result from more than a single cause. It is necessary to check all the possible causes and, by the process of elimination, arrive at the solution. The problems that occur most frequently, the possible cause, and the solution are listed below.

Problem	Possible Cause	Solution
Spotting	Water not hot enough Dishes and cutlery not completely clean Hard water or high dissolved minerals Food residues Mechanical failure	Check hot water temperature. Check loading of the machine. Increase concentration. Check rinse aid concentration, increase if necessary. Install water softener. Check if pre-scraping. Check water and detergent concentrations. Call for approved service.
Specks	Food particles	Check if pre-scraping. Check water and detergent concentrations.
Dishwasher leaks	Soiled or worn gasket	Clean gasket and side of door or replace gasket.
Heavy foam	Check if pre-scraping	Check water and detergent concentrations.
Black marks on china	Metal marks from knives	Soak in mild bleach solution.

Available Pack Sizes

SKU Pack Size
BD11KC/D 20L